

# Sunroof Operating Instructions

## TO REMOVE GLASS:

### STEP 1:

To disengage the rear latch, open and pop up glass:

#### Style A

Push the center of the latch toward the rear of your vehicle to release the handle from the frame. Proceed to Step 2.

#### Style B

Squeeze the spring pin actuator inward to disengage the handle from the frame. Proceed to Step 2.

#### Style C

Push the gray horizontal slide "upward" to disengage the handle from the frame. Proceed to Step 2.

### STEP 2:

With one hand, lift the glass 3" or 4". With the other hand, release both cam locks on the front hinges by pulling down the gray levers (Photo 1).

### STEP 3:

Lift the glass out by pulling back gently. Store safely to avoid chipping the edge or scratching the surface.

## TO REPLACE GLASS:

### STEP 1:

Align the front hinges of the glass with the pins located on the frame. Push the gray levers on both cam locks "forward" to lock them in place (Diagrams 2A and 2B).

**IMPORTANT: Lift the glass up about 3 inches and pull rearward gently to insure proper engagement. Close the glass and make sure there is no wrinkling or binding on the weather seal.**

### STEP 2:

To reattach the main latch:

#### Style A

Align the slot on the bottom of the latch with the pin on the frame. Push directly on the lower portion of the latch arm to engage.

#### Style B

Squeeze the spring pin actuator inward, align with the holes in the brackets, then release and push the actuator outward to fully engage.


#### Style C

Push the lower arm of the main latch against the horizontal pin on the frame. After it snaps in place, verify that the gray slide is completely seated in the "down" position.


**IMPORTANT: Operate the opening lever, and check that the glass is securely in place - both front and rear!**

**PLEASE KEEP IN YOUR VEHICLE**


**WARNING: Never attempt to remove or replace the sunroof glass panel while the vehicle is in motion.**

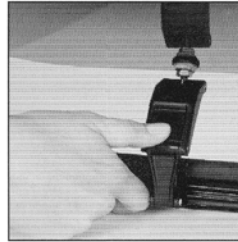

Style A

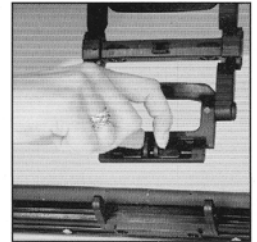

Style B

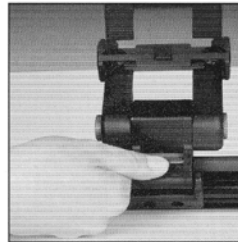

Style C

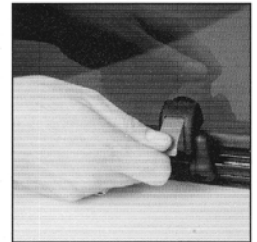


Photo 1

**IMPORTANT**

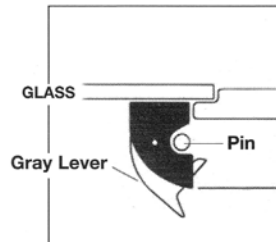


Diagram 2A

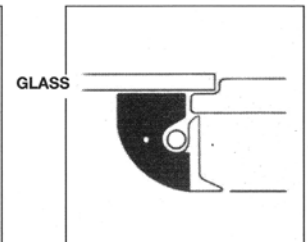


Diagram 2B

**To prevent leakage and/or loss of glass, please make sure that the front latches are secure under the pins, and that levers are locked flat before driving.**

