

1989–1994 Amigo Installation Instructions

PLEASE READ CAREFULLY BEFORE STARTING INSTALLATION

To safely lift and install this hardtop, you will need the assistance of at least one other person.

Follow the instructions and perform the steps in the sequence given. Short cuts to the directions may result in an unsatisfactory installation.

WARNING

The top on this vehicle is designed only for additional protection against the elements.

Do not rely on the top to contain occupants within the vehicle or to protect against intrusion of foreign objects, nor injury during an accident.

Make sure all brackets and screws are tight. Periodically check for tightness and retighten when necessary.

WEAR SEAT BELTS AT ALL TIMES

Parts included in the installation kit.

- 2ea. Phillips M6 x 20 Pan Head Screws
- 4ea. Catches
- 2ea. Phillips 8 x 3/4" Pan Head Self Drilling Screws
- 1ea. 50" Self Adhesive Seal Strip
- 1ea. Instruction Sheet



1. Remove the soft top cover and then remove all of the screw snaps.



2. Remove the metal strips around the perimeter seal.



3. Remove the metal strips around the perimeter seal.



4. Unbolt the soft top left brace.



5. Unbolt the soft top right brace and remove brace.



6. Install the supplied catch and bolt on the left side.




7. Install the supplied catch and bolt on the right side.




8. Install supplied 50" weather seal.



9. Note weather seal location.

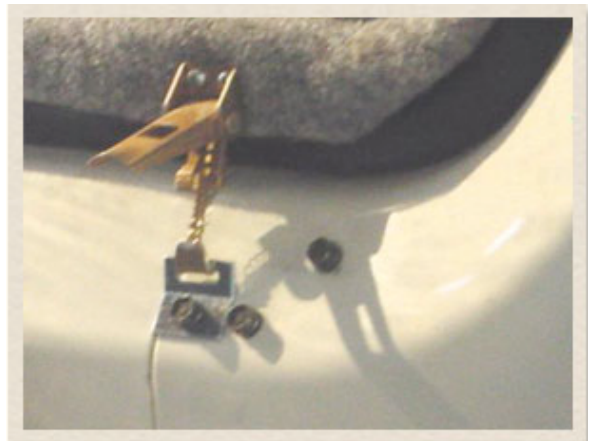

10. Install top and engage front cam locks (light tension).

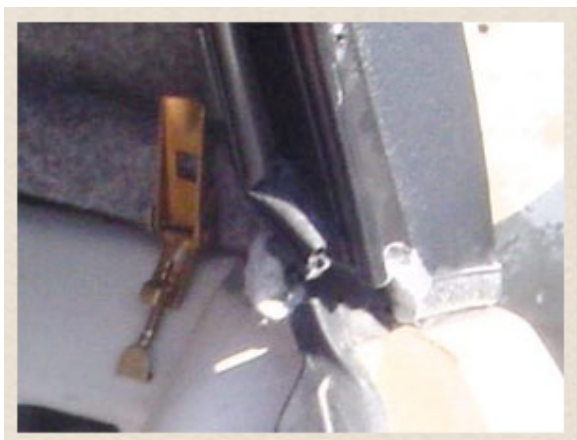

11. Open rear cam locks.



12. Attach catch and close cam lock. Mark hole and install screw. Do both sides. Readjust all cam locks to medium tension.