

1998–2003 Amigo Rodeo Sport Installation Instructions

PLEASE READ CAREFULLY BEFORE STARTING INSTALLATION

To safely lift and install this hardtop, you will need the assistance of at least one other person.

Follow the instructions and perform the steps in the sequence given. Short cuts to the directions may result in an unsatisfactory installation.

WARNING

The top on this vehicle is designed only for additional protection against the elements.

Do not rely on the top to contain occupants within the vehicle or to protect against intrusion of foreign objects, nor injury during an accident.

Make sure all brackets and screws are tight. Periodically check for tightness and retighten when necessary.

WEAR SEAT BELTS AT ALL TIMES

Parts included in the installation kit.

- 2ea. Allen Head M6 x 45 Socket Cap Screws
- 2ea. Allen Head M6 x 35 Socket Cap Screws
- 2ea. 1" Washers (big)
- 2ea. 3/4" Washers (small)
- 1ea. Instruction Sheet



1. Unzip side windows.
(both sides)



2. Remove side windows.
(both sides)




3. Unzip rear window.



4. Remove rear window.



5. Remove the 3 bolts in the
trim pieces. (both sides)

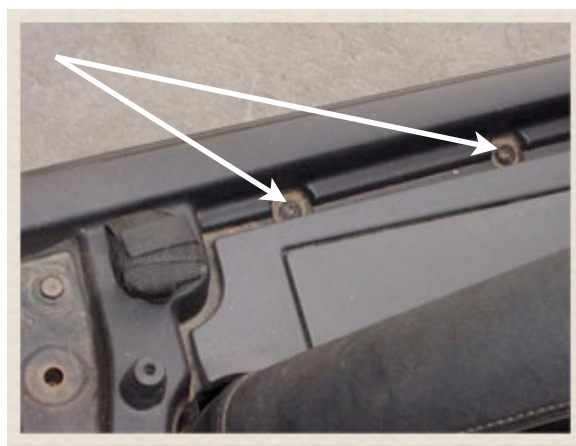

6. Remove these 2 screws in
the trim piece. (both sides)



7. Pry this trim piece off with a screwdriver. (both sides)



8. Remove the 3rd screw in the trim piece. (both sides)



9. Open & remove storage box doors. (both sides)



10. Remove trim pieces. Save rear bolts. (both sides)



11. Remove these 2 bolts & lift off soft top brace. (both sides)



12. It should look like this.



13. Reinstall bolts & tighten.
(both sides)



14. Before installing top,
screw 4 bolts in & out to
clean nut plate threads.
(both sides)



15. Install hardtop and then
install the short bolt & small
washer in the back holes,
do not tighten. (both sides)



16. Install the long bolt & big
washer in the front holes.
Do not tighten. (both sides)



17. Install 2 bolts on each
side in the rear flange.
(both sides)

18. Secure roof locks and
tighten all 4 screws. Then
reinstall storage doors.
(both sides)