


81-86 Jeep CJ8 Scrambler

1 PIECE HARDTOP INSTALLATION INSTRUCTION SHEET

PARTS

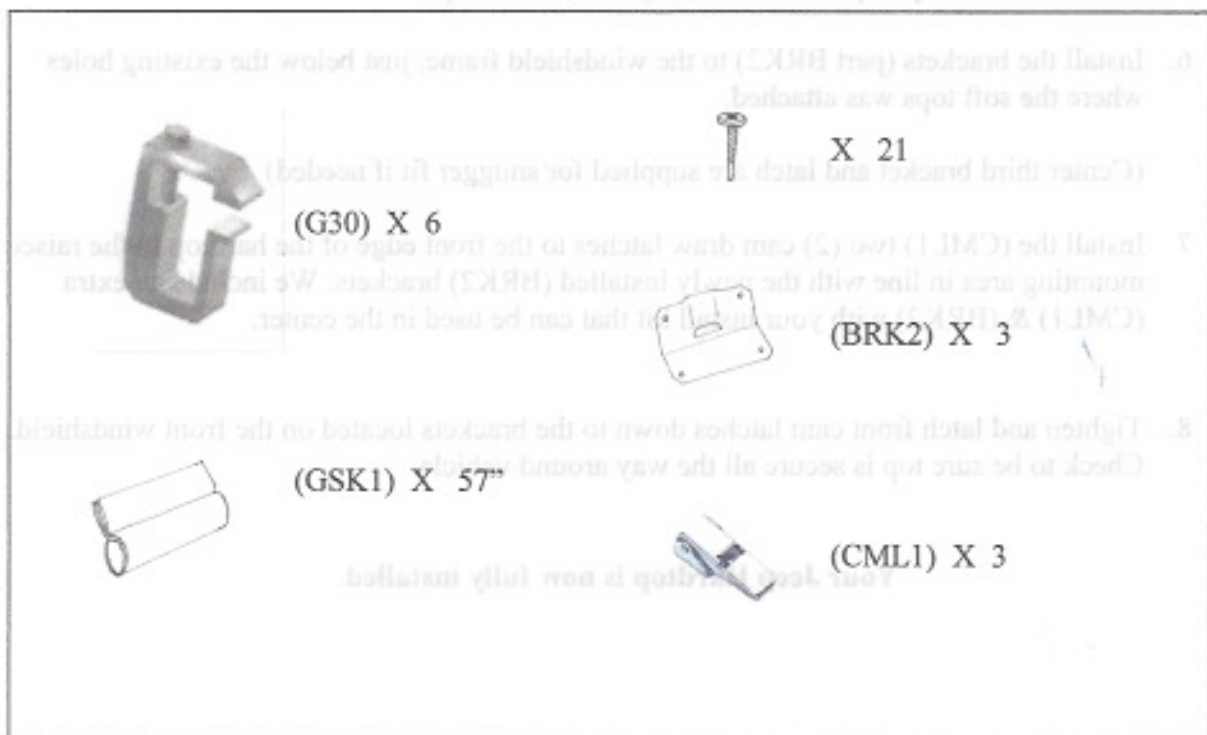

TOOLS NEEDED

Drill
#2 Square Bit
9/16 Wrench

Installation Instructions:

1. Please read all of your directions and cross check your parts list before starting installation.
2. Refer to you owner's manual and follow instructions to remove your soft top.
3. Place (GSK1) along the top of the windshield frame.

OVER

4. Place the one (1) piece hardtop on the vehicle and position the hardtop with doors in shut position so that the gap between the hardtop and doors just barely clear hitting each other. You may have to push on the rear of the hardtop forward or backward to adjust the fit!
5. Secure the hardtop in place with the 6 (TL30) C-Clamps.
6. Install the brackets (part BRK2) to the windshield frame, just below the existing holes where the soft tops was attached.

(Center third bracket and latch are supplied for snugger fit if needed)
7. Install the (CML1) two (2) cam draw latches to the front edge of the hardtop in the raised mounting area in line with the newly installed (BRK2) brackets. We include an extra (CML1) & (BRK2) with your install kit that can be used in the center.
8. Tighten and latch front cam latches down to the brackets located on the front windshield. Check to be sure top is secure all the way around vehicle.

Your Jeep Hardtop is now fully installed.

TOOL'S NEEDED

Drill
6/32 Square Bit
Wire Wrench

Installation Instructions:

1. Please read all of your directions and cross check your parts list before starting installation.

2. Refer to your owner's manual and follow instructions to remove your soft top.